






# Parameter configuration


## ※ How to read parameters (example)

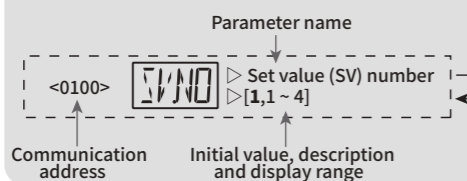

 
## ※ How to change parameter set values

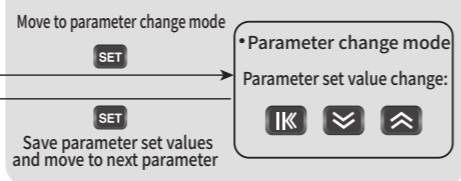


## Full Menu: press and hold MD + SET for 1 sec.

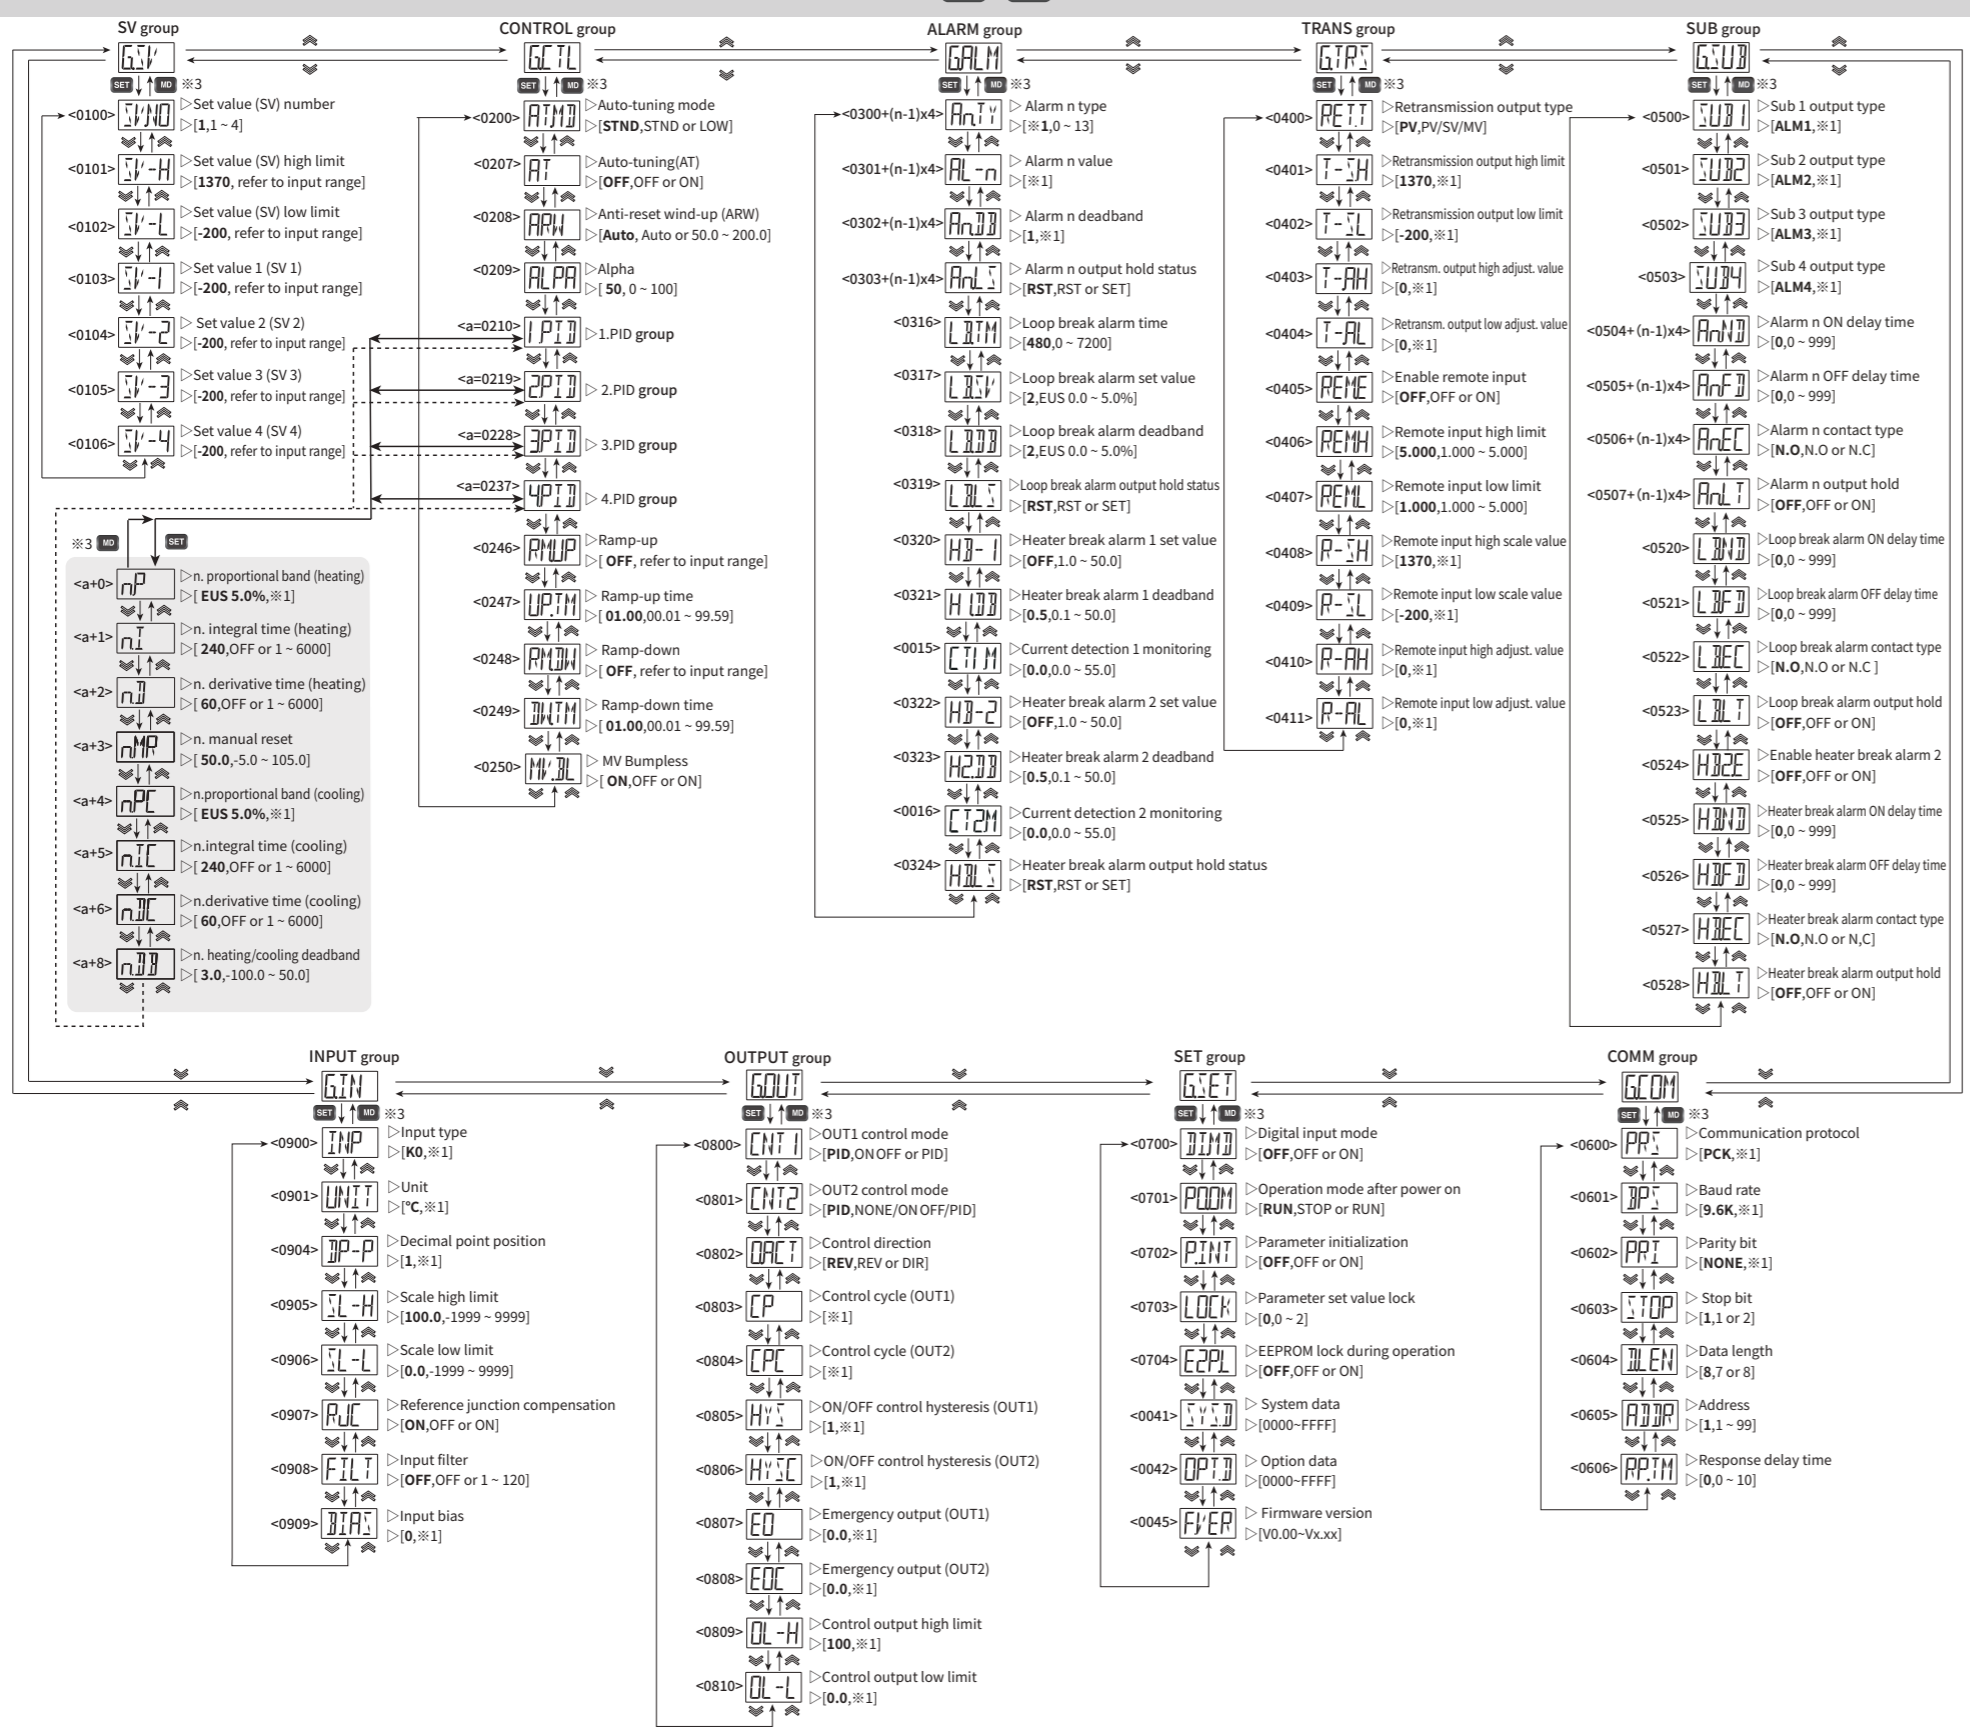

## Basic Menu: press and hold MD + IKK for 1 sec.

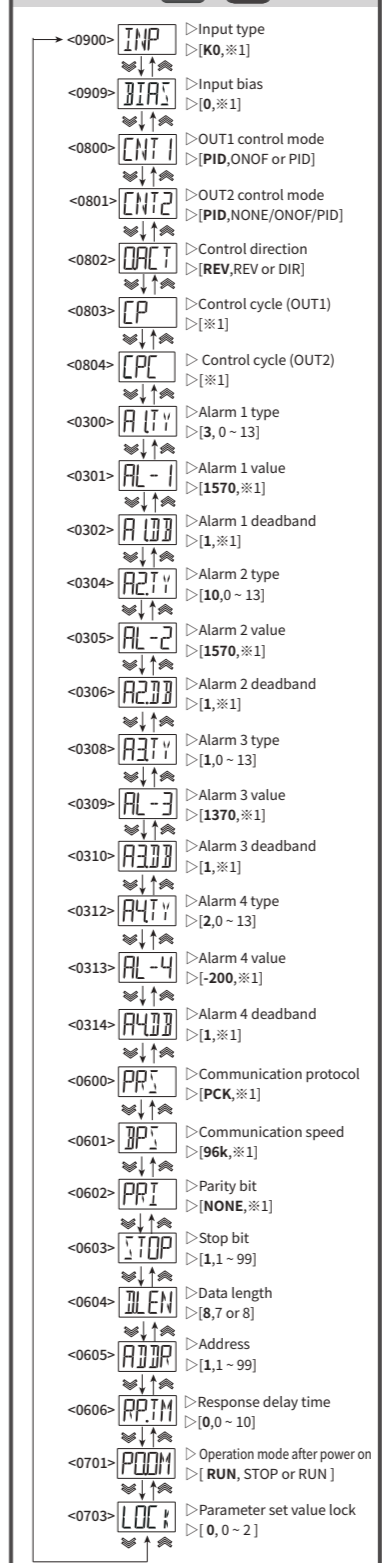

## Simple menu: press and hold MD for 1 sec.

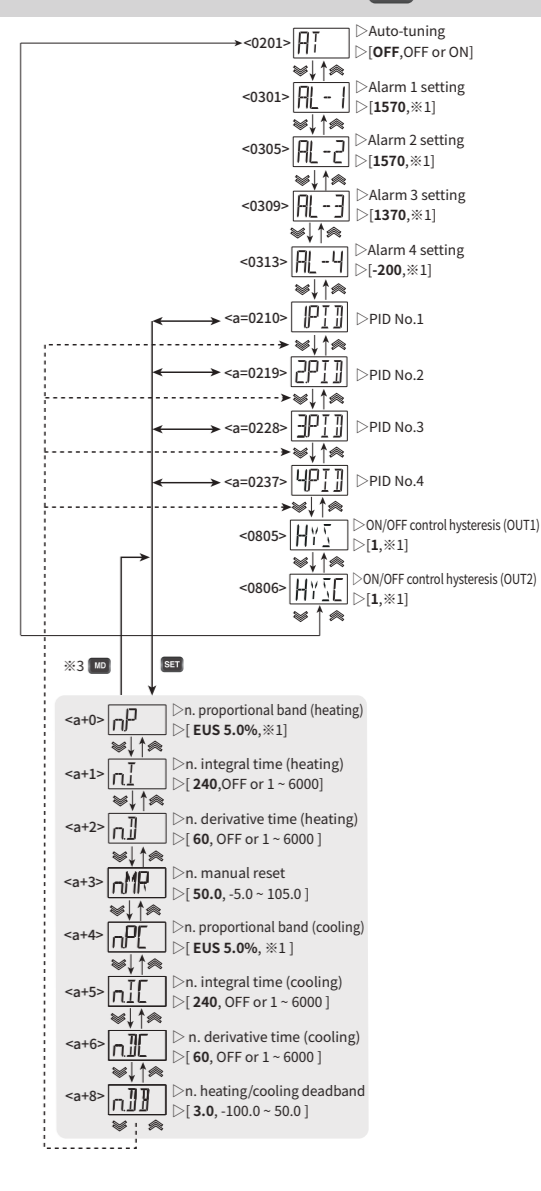

※ 1 : Refer to the User's Manual  
 ※ Please visit our homepage ([www.hanyoungnux.com](http://www.hanyoungnux.com)) and refer to the user manual in the archive.  
 ※ 2 : Key to move to operation mode screen  
 Press and hold MD in the parameter setting screen for 1 sec. to move to operation mode screen  
 ※ 3 : Move to group name display  
 Press MD during parameter display to move to group name (but during parameter display in n.PID, it moves to n.PID).  
 ※ The parameter display differs depending on suffix code options and parameter settings.